


### STABILIZER Installation

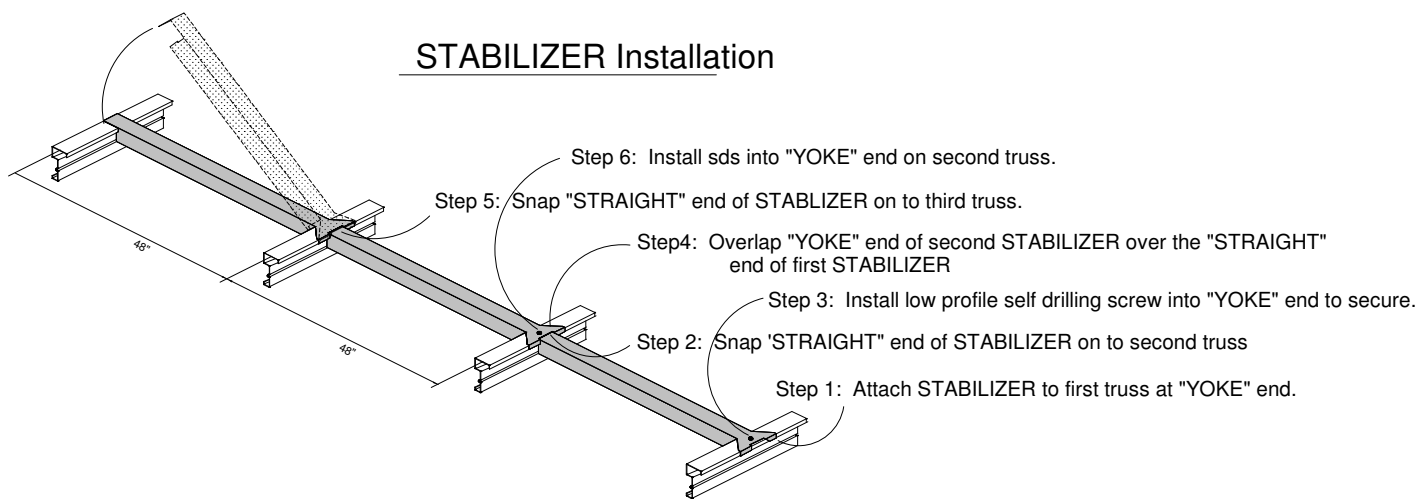

- Step 1: Attach STABILIZER to first truss at "YOKE" end.
- Step 2: Snap "STRAIGHT" end of STABILIZER on to second truss
- Step 3: Install low profile self drilling screw into "YOKE" end to secure.
- Step 4: Overlap "YOKE" end of second STABILIZER over the "STRAIGHT" end of first STABILIZER
- Step 5: Snap "STRAIGHT" end of STABILIZER on to third truss.
- Step 6: Install sds into "YOKE" end on second truss.